 


MAINTENANCE AND CLEANING

If the inside of the heater or the heating element is covered with dust or dirt, please have it cleaned by a qualified service provider. Do not operate the heater in this situation. Disconnect the heater from the power supply. Do not clean before cooling to avoid burns! The only thing that needs to be cleaned is the exterior surface of the heater. Do not use strong abrasives or solvent cleaners when cleaning the heater as they may damage the plastic parts. Wipe the outside of the heater with a wrung and damp cloth. When not in use, remove it from the mounting position and store the heater carefully in a safe, dry place out of reach of children. In humid environments (such as sea or seaside, etc.) or in areas with high salinity in the air, if you do not use the heater for a long time, please clean and dry it and store it in a safe package. Do not touch the heating element with your fingers, as the residue on your hands can affect the lifetime of the heating element. If you accidentally touch it, remove the finger marks with a soft cloth with alcohol. Do not attempt to repair or adjust any electrical or mechanical functions on this heater. The heater does not contain user-serviceable parts and must be returned to the manufacturer or its agent if the product is damaged or defective.

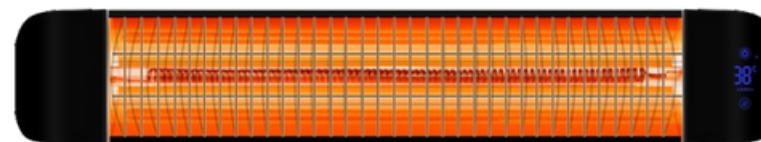

User's Guide



Please read the instructions carefully before use.

In order for our products to serve you better, please read this manual carefully before using it and keep it for future reference. We are not responsible for any damage resulting from failure to follow the following instructions.


Safety Precautions: When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following.

WARNING

To avoid overheating, do not cover the heater. The “no cover” symbol on the appliance means that no objects may be covered on the appliance or heating element.

Children should be taken care of to ensure that they do not play with the heater.

WIFI operation: Scan the QR code with your mobile phone, download and install the Smart Life APP. Open the app, click Add Device or click the "+" in the upper right corner For all devices, select electric heating, click OK, connect to WIFI. Enter the WIFI password, click to confirm, and the connection is successful. APP operation interface. (When WIFI connection fails, after reset, reconnect when WIFI indicator flashes quickly)

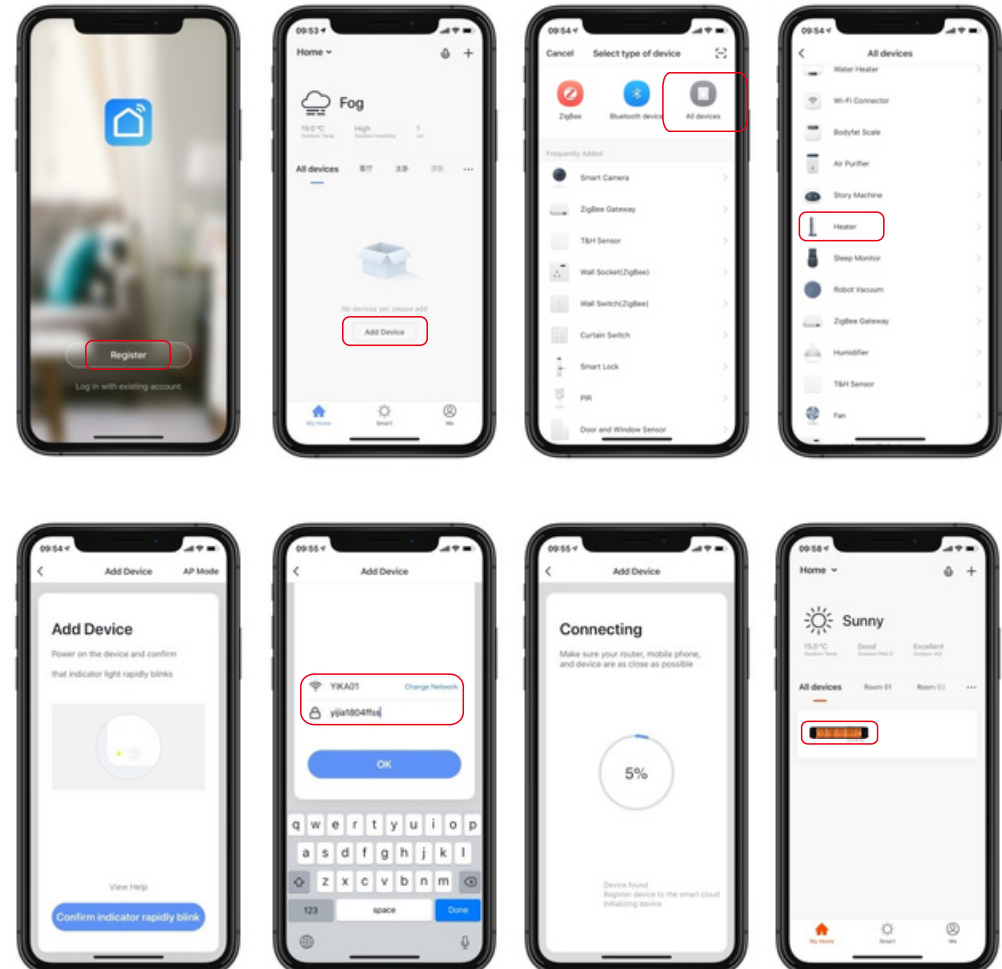

CONTROLLER

On/Off
Press to activate child lock

Adjustment button

Up arrow
Press SET before changing between C° and F°

Down arrow
Press SET before resetting Wi-Fi

SMART heating button
When activated, the heating level will adjust according to the room temperature

Heating level
Press SET before activating the open window function. When enabled, if the temperature drops more than 3°C in 2 minutes, Solaro will turn off to save energy.

Display selection (Full display/Room temperature/Active heating)
Press SET before activating the motion sensor. When enabled, Solaro starts when motion is detected and stops after 2 minutes if no motion is detected.

Timer button
Select the time using the up/down button.


INSTALLATION

Before installation and during installation, ensure that the heater is always disconnected from the power supply and is in a cold state. The heater can be installed horizontally or vertically. When installing the wall and ceiling machine, the minimum point of the heater should be higher than 1.8 meters from the floor, which ensures that the heater cannot be touched directly during operation.

When installing horizontally or ceiling mounted, do not place the heater at an angle greater than 90 degrees or less than 45 degrees. If the installation angle of the appliance is vertical or close to vertical, make sure the power cord is always under the heater.


During use of the device, there is a certain increase in the temperature of the heater body. Make sure the power cord never touches the heater body and is clear of the heater housing. Do not install heaters on the surface of flammable materials. When installing the heater, ensure that the distance between the heater and the surface of the flammable material is always not less than the minimum safety distance. Make sure the heater is always at least 0.5m wide from the ceiling and adjacent walls. If you want to use the heater outdoors, use a qualified weatherproof outlet. Make sure there are no wires or water pipes in the area where the unit is installed before drilling. The heater must be installed on the mounting bracket provided by the manufacturer (see Figure A below).

Do not use this heater with a programmer, timer, separate remote control system or other device that automatically turns the heater on, as there is a risk of fire if the heater is covered or improperly positioned.

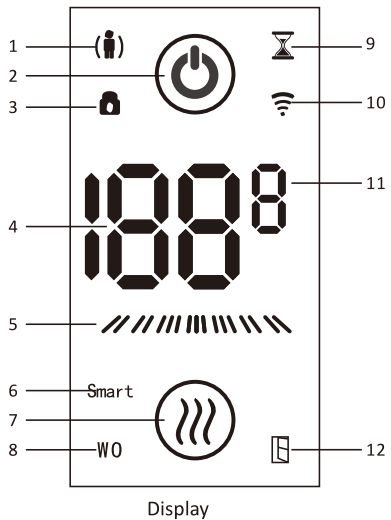


WALL INSTALLATION

Figure A:

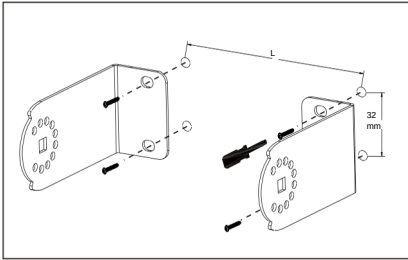


Remove the expansion rubber and screws from the accessory bag, drill four holes with a diameter of 8mm on the wall, the hole depth is 70mm, the hole distance is 32mm, (300mm ≤ L 450 mm) install the expansion rubber into the fitting in the hole, then mount the wall bracket from the accessories. Take it out and attach it to the wall with a 5*60 screw.

Figure

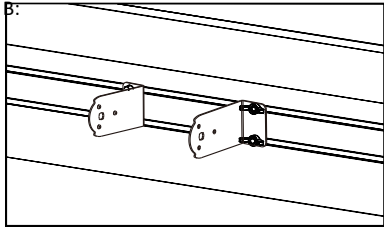



Place the wall bracket on the corresponding screw on the back of the heater, then adjust the wall bracket to the correct position with the nut from the accessory bag, then lock it to ensure that it does not will not loosen.

Figure C:

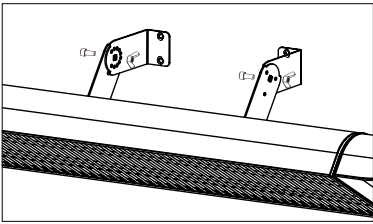


Lock the wall bracket mounted on the back of the heater and the wall, adjust the heater to a suitable position, and secure the lock with the nut and screw of the accessory sleeve to ensure that it does not does not loosen.


WALL DIAGRAM

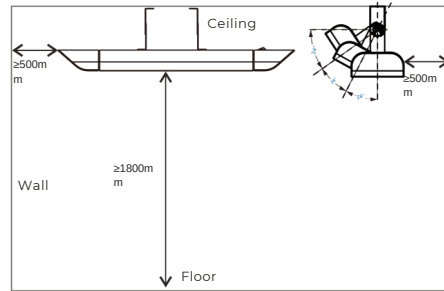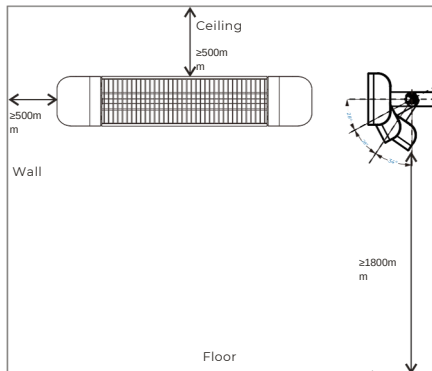


TRIPOD INSTRUCTIONS

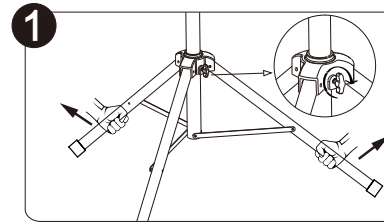

 
1. Pull the tripod's tubes out to the maximum range.
2. Then tighten the thumb nut on the bushing clockwise.

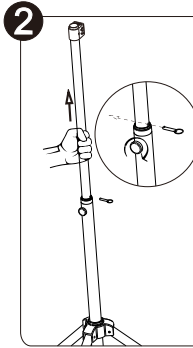



 
1. Lift the upper column up and insert the pin into the positioning hole.
2. Then tighten the thumb nut on the bushing clockwise.

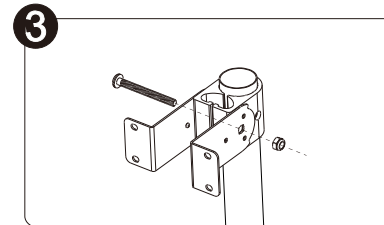

 Take out the fixing bracket on the heater product and install it on the fixed connection part of the tripod.

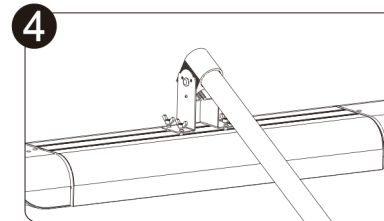

   Adjust the distance between the four studs on the back of the heater, place the heater bracket on the studs, and then tighten the nuts.

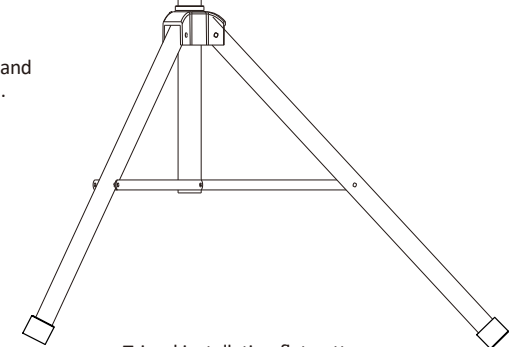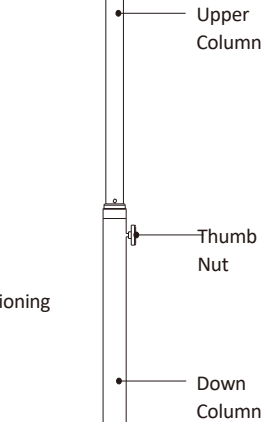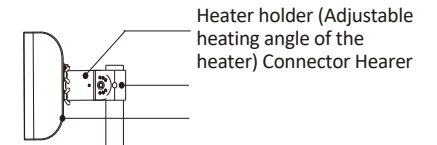

Tripod installation flat pattern